

You need a small wireless laundry tag before you can buy machines.
Place and hold the tag up against the wireless symbol until you hear a "beep" (1-3 sec.).

Door entry control (if available)

Place the tag up against the wireless symbol when it beeps, the door can be opened.



Payment system

On the screen you can find the machinery of the laundry.

Green: Ready for purchase

Blue: Occupied

Yellow: Booked

Red: Closed and can't be used

Place and hold the tag up against the wireless symbol until you hear a "beep" (1-3 sec.).
A voice guide will start and you have to commence purchase within 15 sec.

You can see your monthly purchase/balance in the top of the screen.

Press directly on the screen to choose machines.

When one or more machines are chosen, you just have to press the green Approve button.
- then the machines can be started

A dryer and ironer will normally be bought in periods of ex. 15 min. If you want ex. 45 min. drying, then you have to press the dryer icon 3 times.

(you will be voice guided)

The language button is located in the lower right corner of the screen. You can choose between the available language or simply "mute".

Chosen language will be stored on your laundry tag.
- the SMS text messages will change as well (if available).

