



**EASY 1/3/6
USER**



You can read out the price of each machine by pressing the machine button (without chip card insert in payment system)

At "cash" systems will the cards balance be showed in the display when the card is inserted - eg.:

Balance: 59KR

At "credit" systemes when you insert your chip card:

SEL. MACHINE

Select a machine by pressing the machines button e.g. WASH1 and the machine starts.
- after 2 sec. the display tells you can take your card:

TAKE CARD

If you want to add more time on eg. dryers, you just need to press on the machine button again. (with the card inserted)

Time left on eg. dryers can be read out by pressing on the machine button - without card inserted.